

# ECORAPID



## STAIN REMOVER CLEANER FOR DESKS AND SCHOOL DESKS

### GENERAL DESCRIPTION

**ECORAPID** is a quick cleaner formulated to eliminate grease and stains of permanent marker and ink from desks, school desks, office furniture, keyboards of electric machines, it is also used for cleaning aluminum frames and laminate panels.

### DIRECTION FOR USE

Spray **ECORAPID** on surfaces to be cleaned and rub with paper or cloth better in microfibre EXTRAKLIN until stains and drying are removed.

Do not spray directly on electrical parts, but wipe with cloth or paper soaked with the product.

### TECHNICAL DATA

Appearance	transparent green liquid
pH	9.3 ± 0.2
Density	0.976 g/ml
Active contents	33%

#### Chemical composition – Reg. (EC) 648/2004

- Anionic surfactants	conc. < 5%
- Amphoteric surfactants	conc. < 5%
perfumes, Limonene	

The product contains surfactants with primary biodegradability at least 90% and ultimate aerobic biodegradation complying with Reg. (EC) No. 648/2004.

### WARNINGS

#### Labelling



#### Warning

Causes serious eye irritation.

Contains : (R) -P-MINT-1,8-DIENE. May produce an allergic reaction.

Ready carefully the safety data sheet before use.